Home Decorators

Collection

HDC # 05326 MFG# TW-17673
PARSONS BOOKCASE 62"x30"

ASSEMBLY INSTRUCTIONS

Note: Before Assembly, Please be sure to work on a soft, flat surface to avoid any damage to the finish.

Made In China

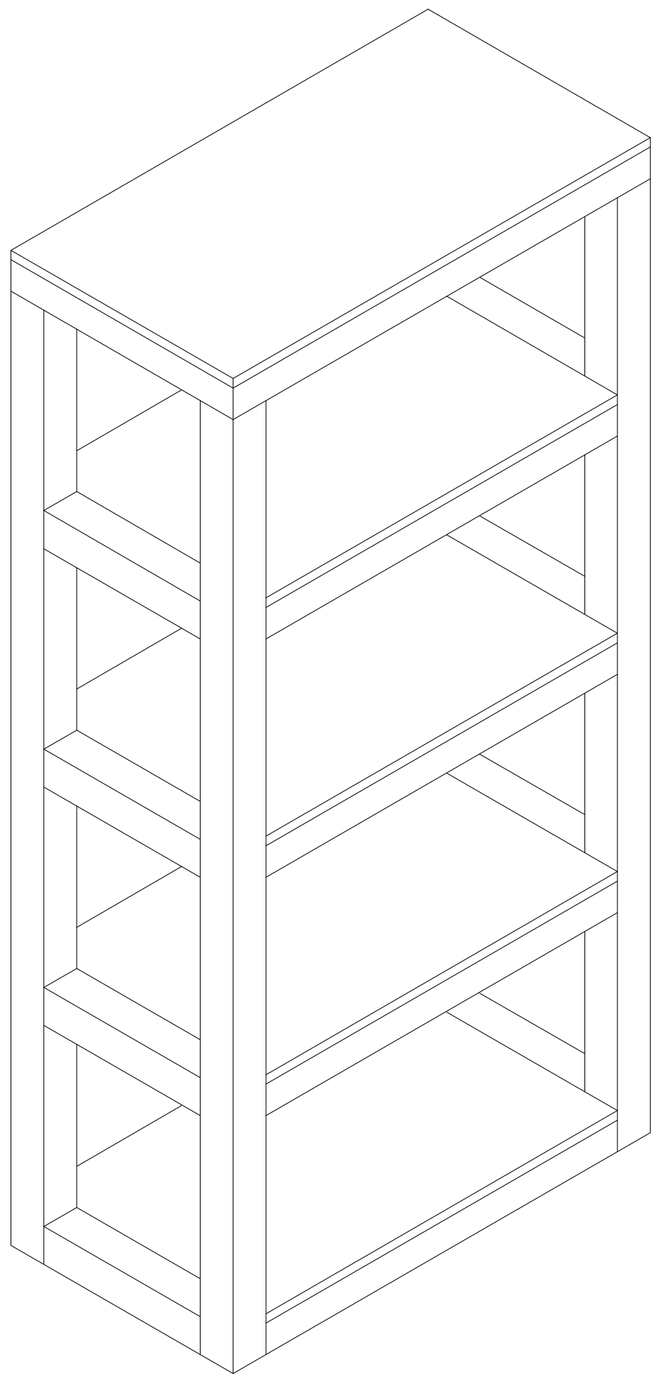

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

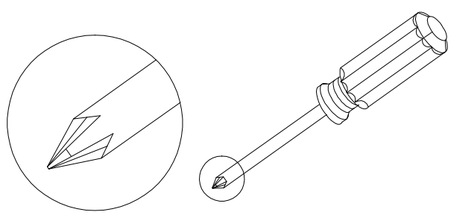

"+"Screw driver

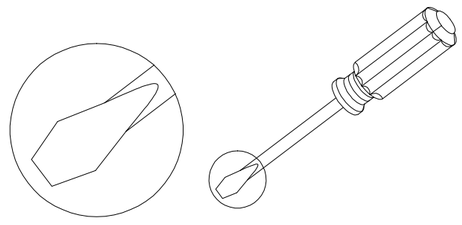

"-"Screw driver

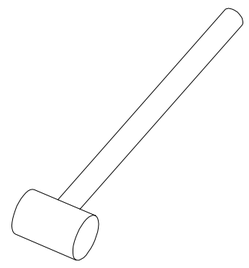

Rubber Mallet

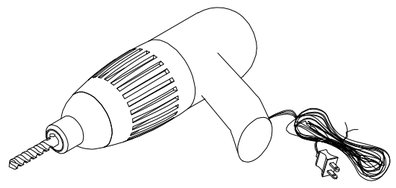

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.

(2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.

DO NOT USE HAMMER

(3) WIPE AWAY EXCESS GLUE.

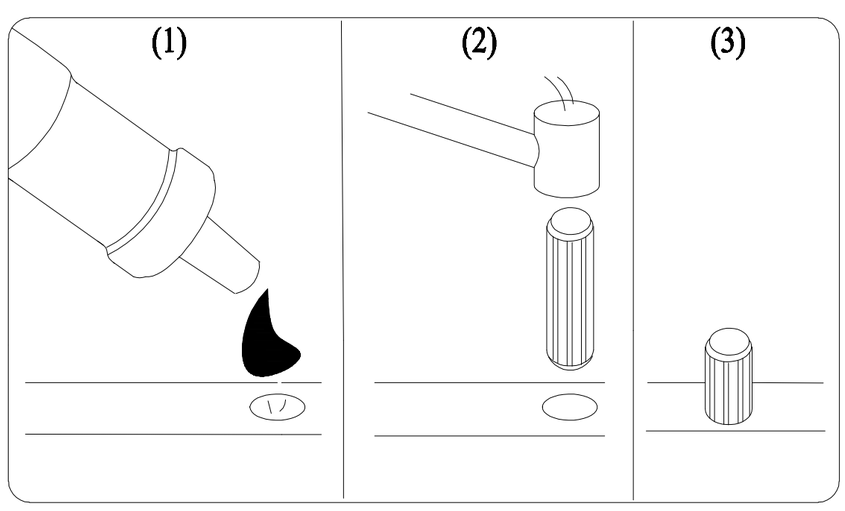

PARTS LIST

LEFT SIDE FRAME 1PC 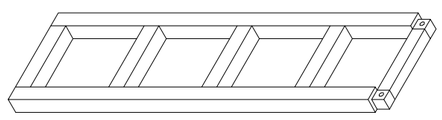 A	RIGHT SIDE FRAME 1PC 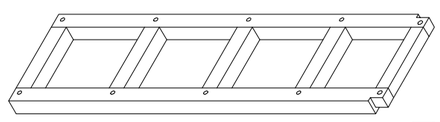 B	SHELF 4PCS 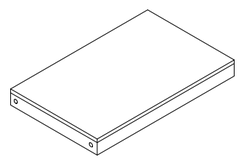 C	TOP PANEL 1PC 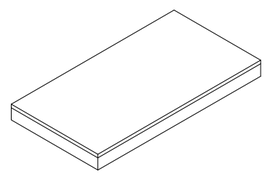 D

HARDWARE LIST

BOLT & GASKET 20 SETS  (1)	TILTING PREVENT HARDWARE 1 SET 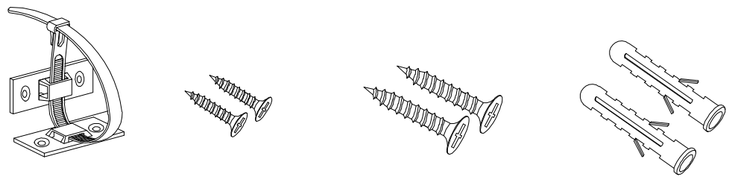 (2)	ALLEN KEY 1 PC 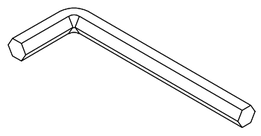 (3)

STEP 1
USE BOLT & GASKET (1) TO FIX 4 SHELVES (C) AND LEFT SIDE FRAME (A) TOGETHER AS SHOWN.

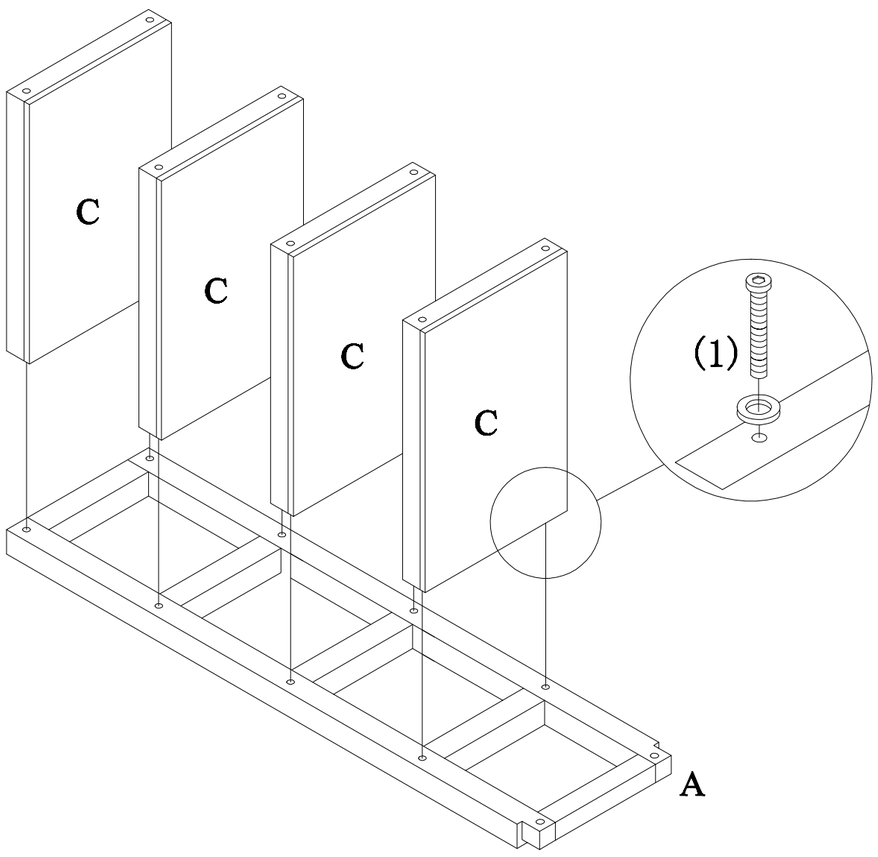

STEP 2
USE BOLT & GASKET (1) TO FIX 4 SHELVES (C) AND RIGHT SIDE FRAME (B) TOGETHER AS SHOWN.

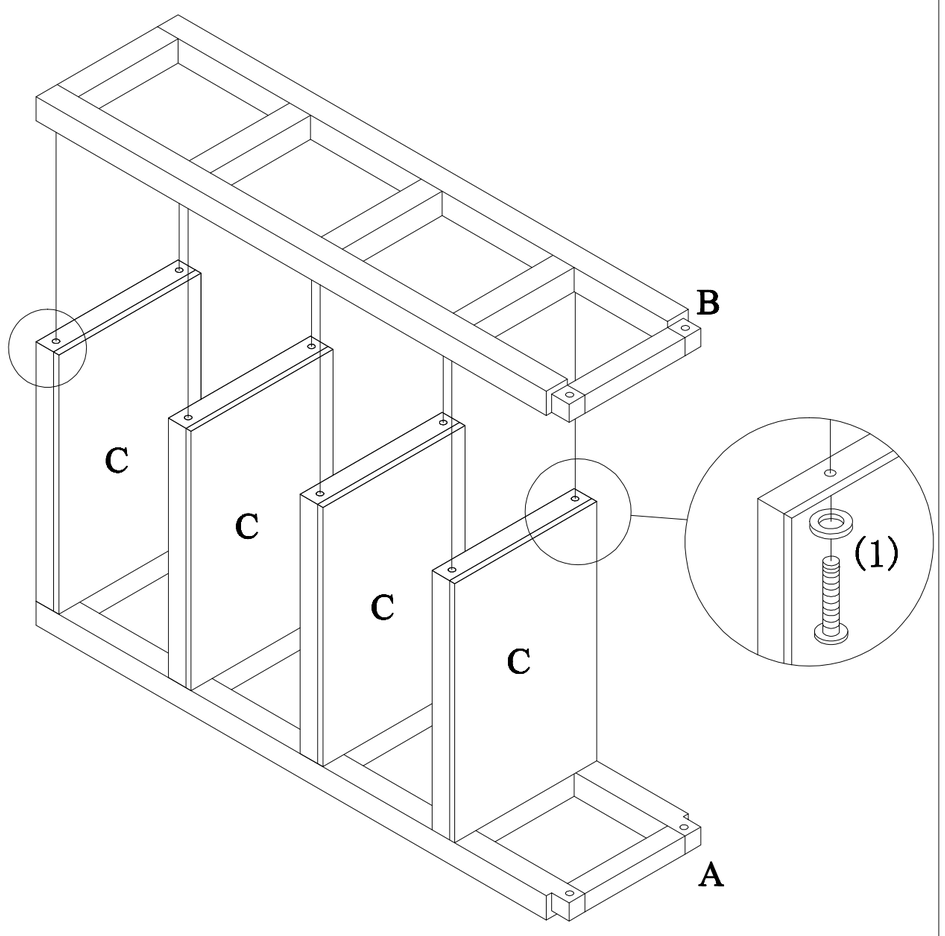

STEP 3
PRESS THE TOP PANEL (D) ONTO THE PRE-ASSEMBLED UNIT AS SHOWN.

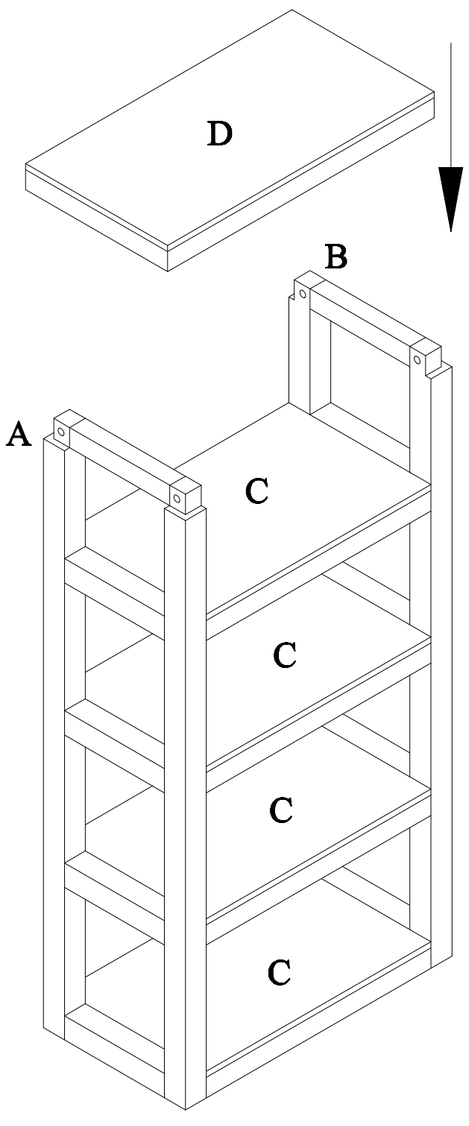

STEP 4
USE THE BOLT & GASKET (1) TO ASSEMBLE THE TOP PANEL (C) AND THE PRE-ASSEMBLED UNIT TOGETHER AS SHOWN.

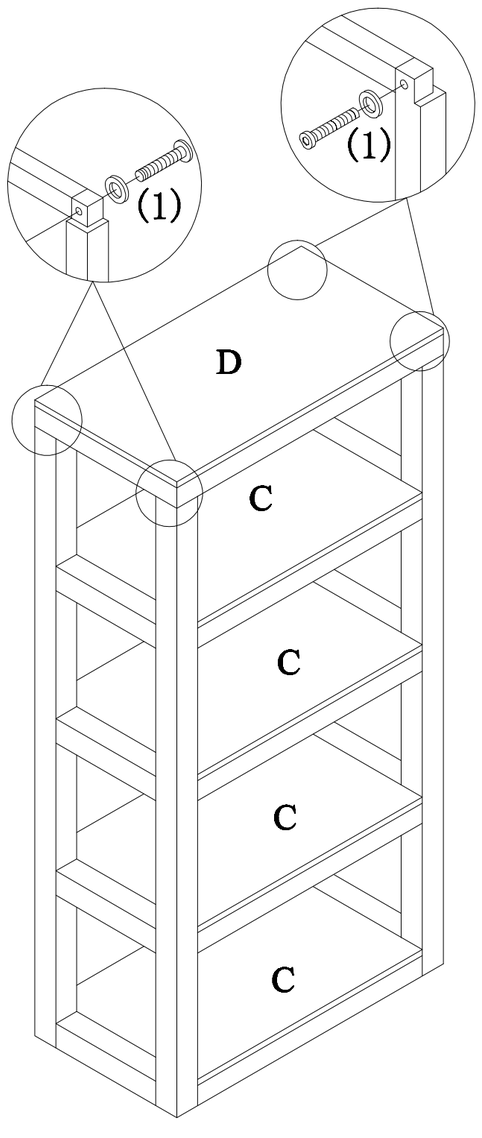

STEP 5

A. USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT THE 2 GECKOS INTO THE 2 HOLES BY RUBBER MALLET, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL,
THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT AS SHOWN.
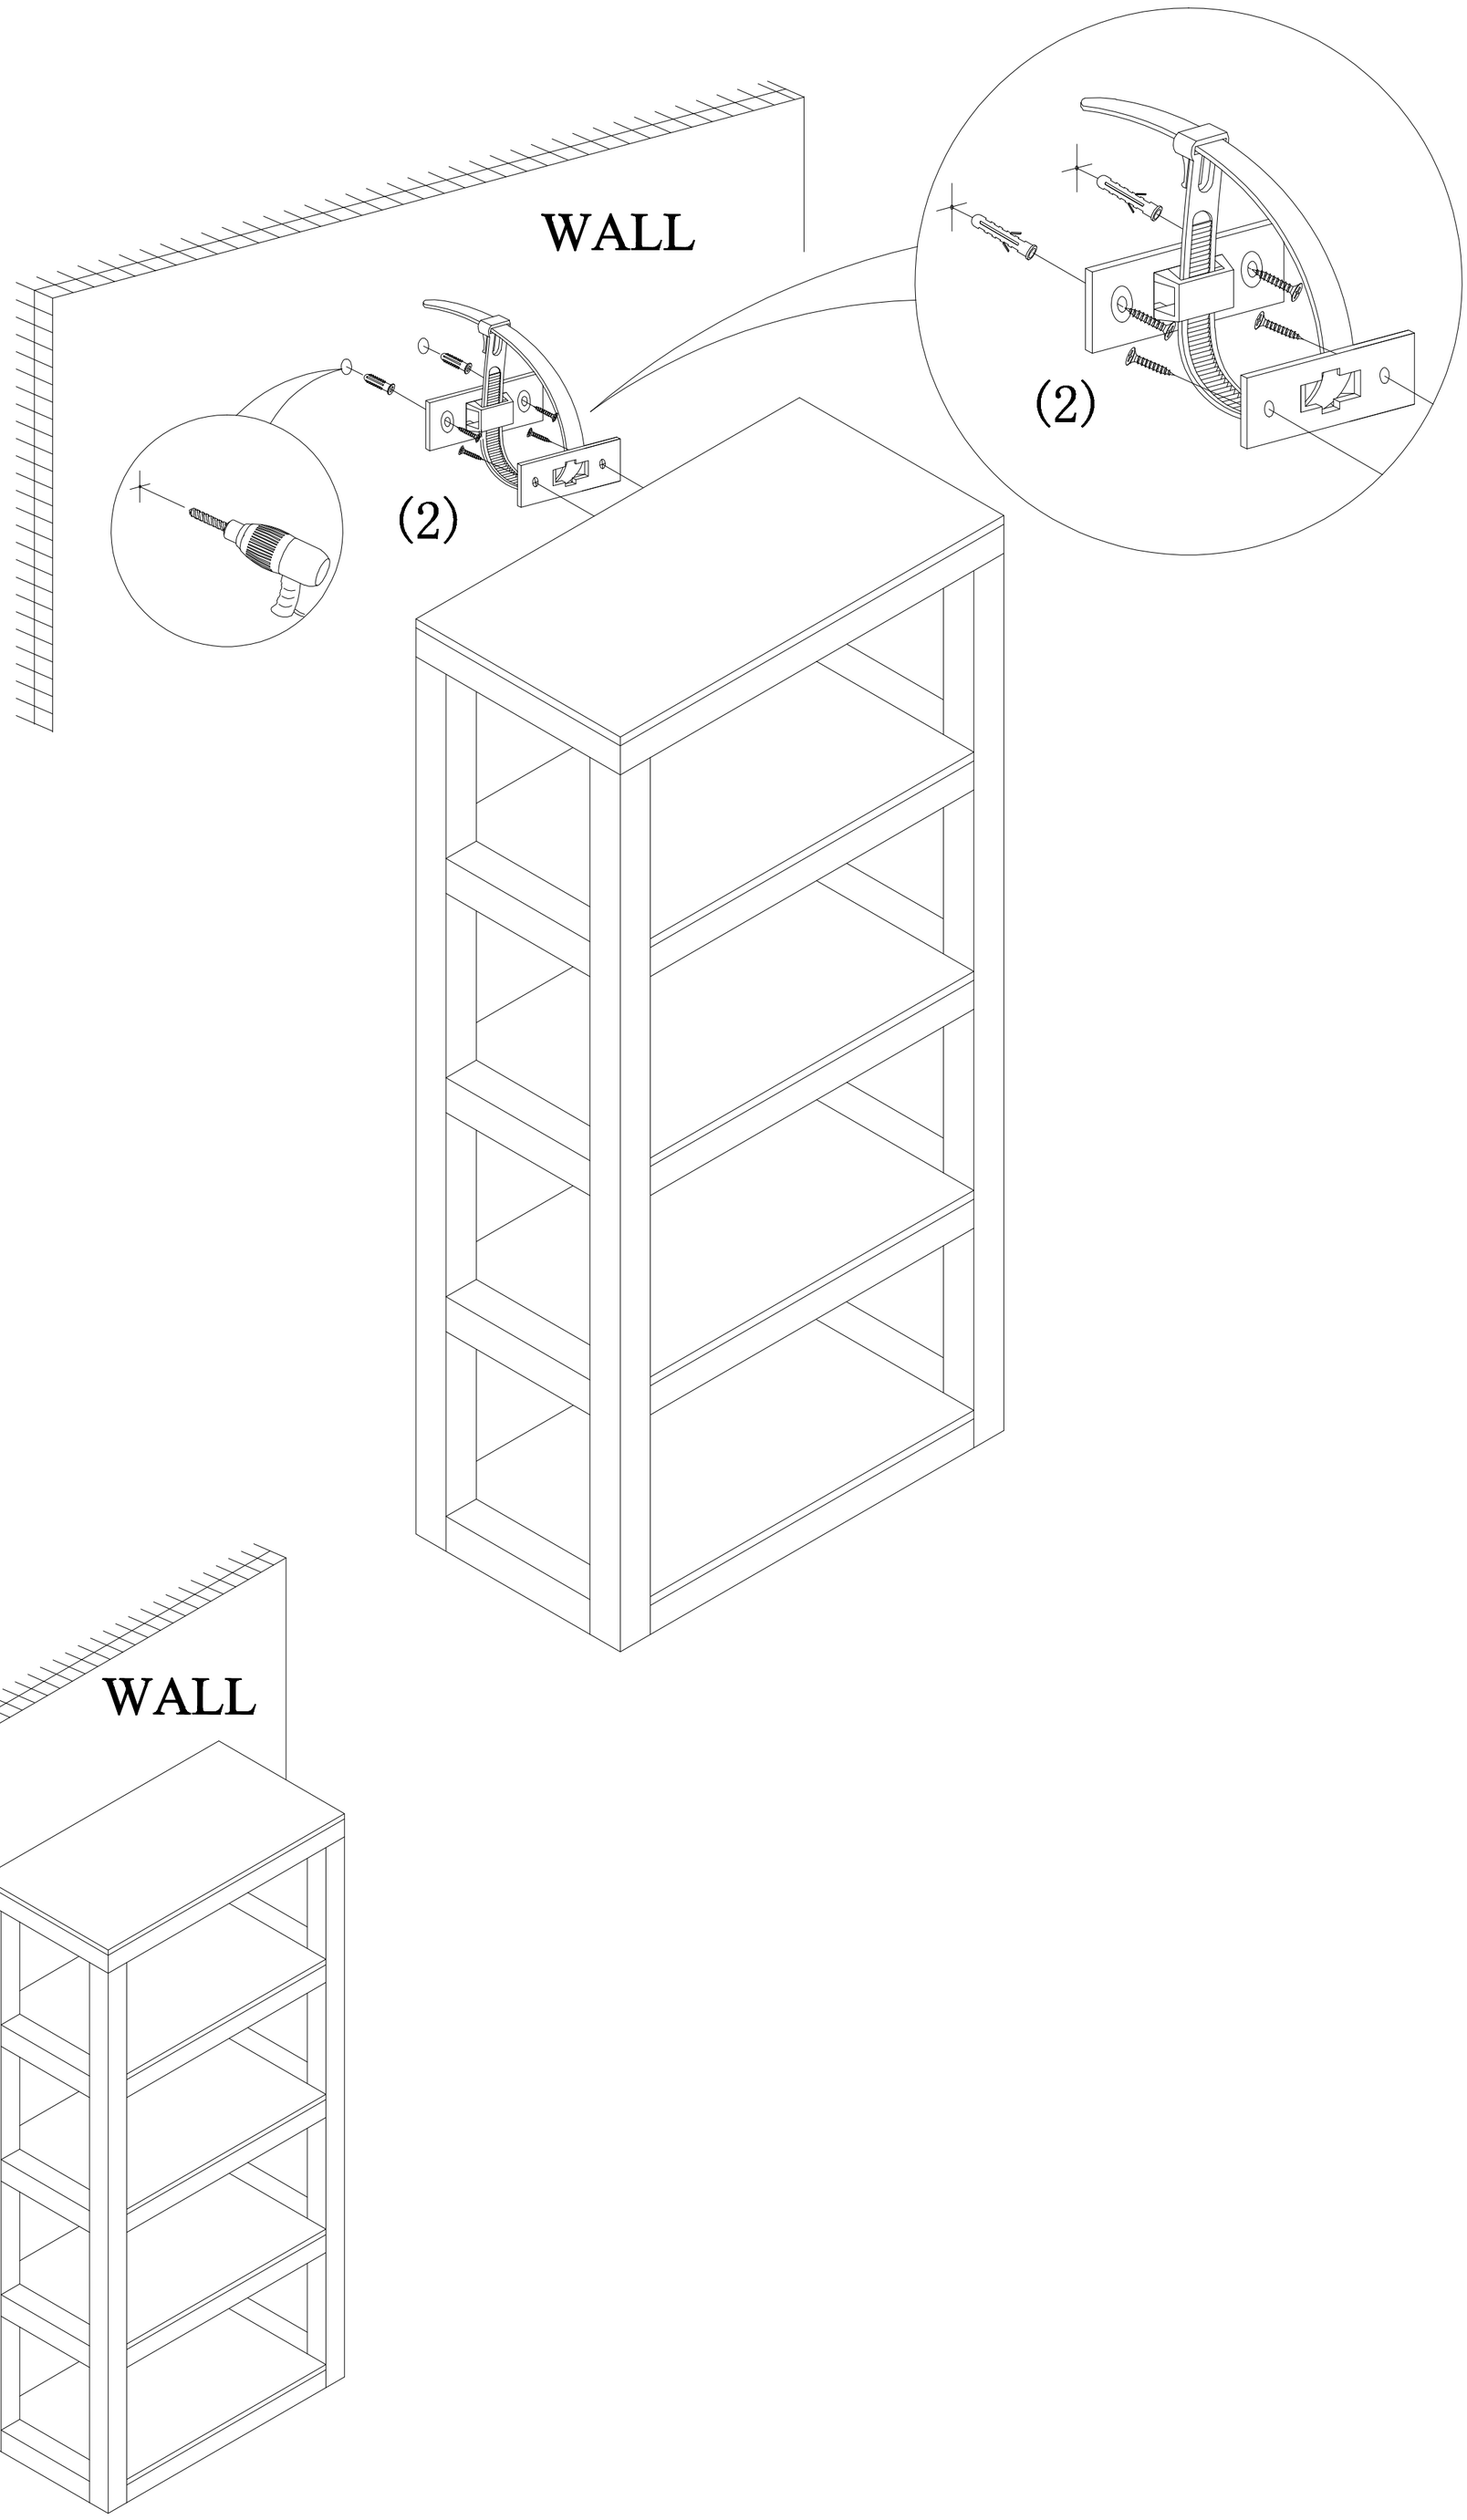
B. USE THE PLASTIC ROPE TO LINK THE PRODUCT & WALL TOGETHER AS SHOWN.